

**YOUR  
RV STEPS  
ARE NO  
LONGER A  
BARRIER**

**GO ANYWHERE  
Your RV Will Take You!**



**BURR  
500 lb.  
Capacity  
Handy-  
Lift HD  
Part No.  
32689**



Now you can have total independence and enjoy RV living to the maximum with the all new Burr 500 lb capacity Handy-Lift HD.

This new personal platform lift from Burr Engineering will raise you from ground level to the entrance of your RV safely and at a controlled speed. It eliminates the struggles, apprehension, and physical exertion that you may have experienced in the past just to gain entrance to your vehicle.


A stainless steel assist handle attaches to the platform when in use to insure positive safety when raising or lowering the passenger. The Handy-Lift platform conveniently folds and locks in place for traveling.

A wireless remote key fob provides convenient operation of the Handy-Lift either by the passenger on the platform or the individual assisting. An extra fob is included in case one is lost or misplaced.

For personal consultation and assistance in determining if your RV experience can be enhanced by installation of the Burr Handy-Lift HD call the phone number listed below. Our experienced staff will be helpful and responsive to your individual needs.



**12 Volt Heavy-Duty Motor**

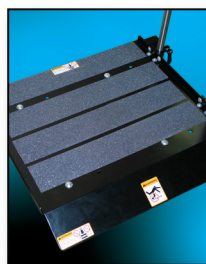

**Spacious 25" x 26" Platform**



**Platform folds and locks for traveling**



**Easily attachable assist handle**



**Two convenient wireless remote key fobs**

**Compare these exclusive features...**

- 12 Volt Heavy-Duty Motor
- Two Remote Control Fobs
- 25 x 26 Platform
- Mounting Brackets Included\*
- Standard Stroke 40" – Custom Strokes Available
- Overall Size With 40" Stroke: 68" Retracted and 108" Extended
- Rugged Construction of Aircraft Aluminum, Stainless Steel and Plated Steel
- Exterior Aluminum Tubing in Satin Black Anodized Finish.
- **Special Exterior Colors** Available Call for Information
- UPS Shippable in 3 Cartons Total Weight: 164 lbs.\*\*

\* Customization may be required for your particular RV. Installation must be made by a qualified RV dealer only.

\*\* Box 1: 15.5 x 15.5 x 13" (38 lbs.) – Box 2: 41 x 27 x 5.25" (65 lbs.) – Box 3: 67 x 12.5 x 6" (61 lbs.)



**BURR ENGINEERING COMPANY** 1125 Watkins Road | P.O. Box 460 | Battle Creek, MI 49015  
1-800-537-9940 or 269-966-3122 | FAX: 269-965-2389 | [www.mobile-lift.com](http://www.mobile-lift.com)